



Airbag Bracket Instructions 58-64 Impala Rear

1. Raise and support car at a safe, comfortable working height.
2. Support axle then remove coil spring, shock, and bump stop. Refer to service manual for proper disassembly procedure.




3. Apply thread sealant to the air spring and screw it into the top of the air spring.
4. Place the upper cup bracket on top of the air spring and secure with two 3/8" bolts.
5. Place the air spring assembly into the coil spring pocket.
6. Align tab on side of upper bracket with hole behind spring pocket-secure with included 3/8" nut and bolt.



7. Bolt the lower mount to the bottom of the air spring using a 3/8" bolt. Before tightening, make sure it aligns with the lower arm.

Brackets are designed for use with
Air Lift Dominator D2600,
Slam Specialties RE7,
Firestone 224c,
or equivalent 7" or 2600# airbags

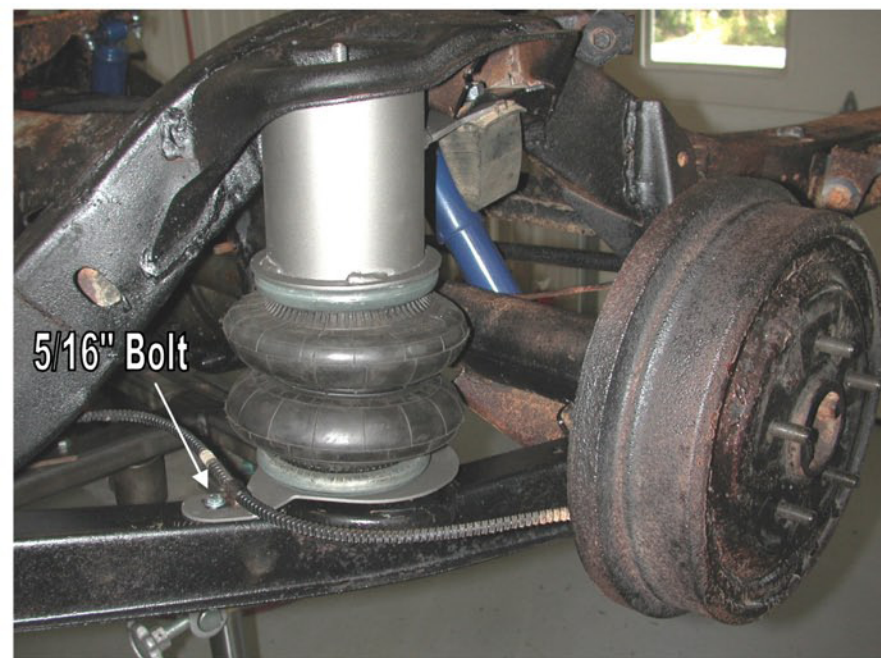

8. The hole in the tab on the lower mount will align with the parking brake cable clamp. It will be held tight with a 5/16" bolt.

9. Make sure the air spring cannot rub on anything though full suspension travel.

Ride height on the air spring will be approximately 5" tall.