

# 1959-1964 CADILLAC REAR BRACKETS

**1.** Raise the vehicle to a safe and comfortable working height. Remove lower spring perch from trailing arm by cutting the welds along the bottom edge. New air spring plate will weld in it's place, centered over the hole in the arm.

**2.** Apply Teflon tape to air fitting and thread into air spring.

**3.** Position airbag assembly as shown in (IMG 02).


**4.** Place Cup bracket onto air spring and secure with bolts.

**5.** Thread stud onto cup bracket, and bolt upper mount into upper spring pocket.

**6.** Bolt airbag onto lower mount.



IMG 01

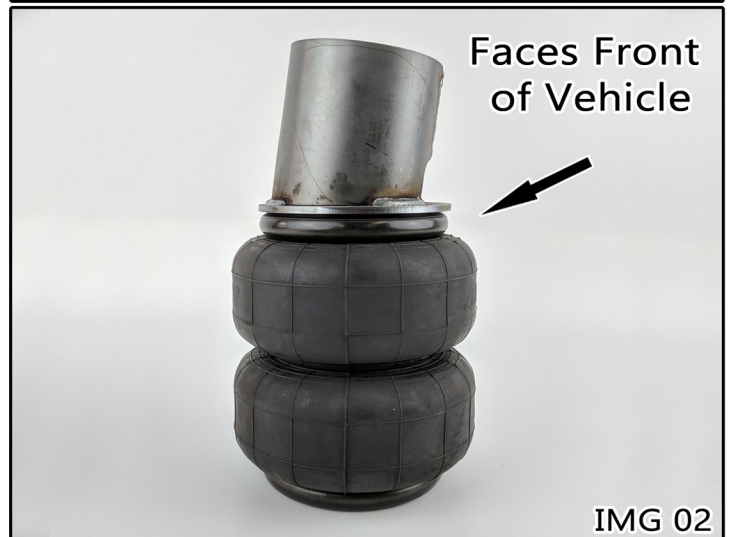

IMG 02



IMG 03