


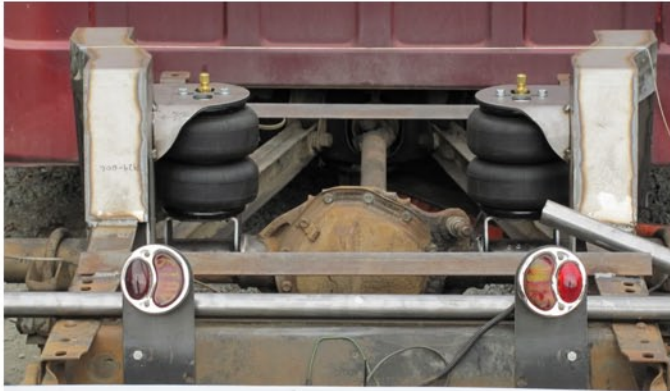

FB360 - Universal Rear Airbag Brackets - Over Axle

1. Raise the vehicle to a safe and comfortable working height with the suspension hanging freely.
2. Center the axle in the frame notch, and raise it to your "fully dropped" position. This process will vary depending upon your link setup, but secure the axle at this point.



3. Bolt the upper and lower brackets to your airbag, and position the assembly over the rear axle. This will show you where to weld the lower perches. Mark that position or tack them in place.

4. Unbolt the brackets from the airbags.

5. Measure 3.25" up from the lower bracket, and position the upper bracket on the side of your frame notch. Make sure the upper and lower brackets are level (parallel) with each other.

6. After double-checking all measurements, and making sure the left and right sides match, weld upper and lower brackets fully.

7. After cooling, bolt the airbags to your brackets, connect air lines, and cycle suspension. Check for any rubbing on the airbag, and adjust position as necessary.

