




# Airbag Bracket Instructions 63-87 Chev C10 Front

1. Raise and support car at a safe, comfortable working height. Let the front suspension hang freely.
2. Remove coil springs, shock absorbers, and bump stops. Refer to factory service manual for proper disassembly procedure.

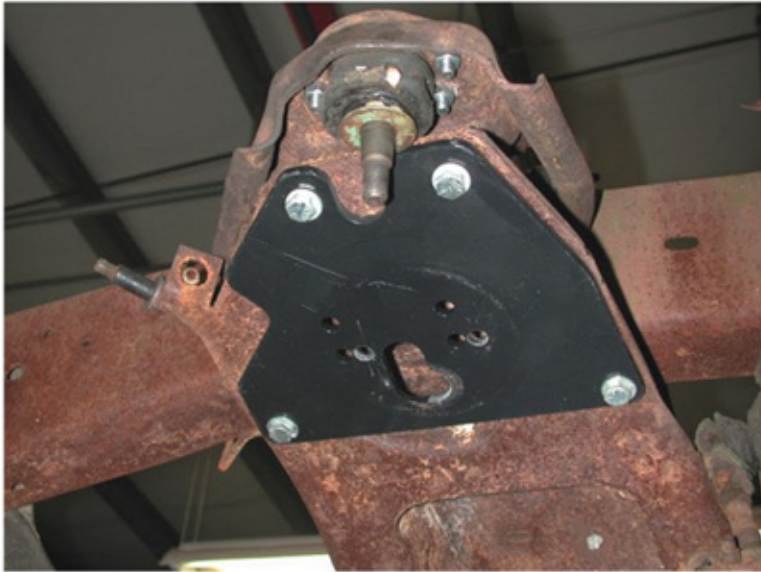

3. Hold the upper plate to the crossmember as shown in the picture to the left and clamp to frame. Using the plate as a template, drill 4 mounting holes in crossmember.

4. Insert air fitting into air spring using thread sealant. Remove the upper plate from the crossmember, and bolt onto air spring using 3/8" bolts.

5. Bolt lower cup bracket onto air spring using 3/8" bolt.

6. Route air line through frame, connect to air spring, and bolt upper bracket onto crossmember. The lower mount will just sit in the spring pocket on the control arm.

7. Reassemble front suspension, and cycle using a jack to check for clearance all around air spring.

**NOTE:** Some models will have a bump stop on the lower arm with a steel mount- this may need to be removed to allow clearance for the air bag. Cut the mount off of the arm and grind flush to prevent airbag damage.

